

RS01-35F SPIRAL-WOUND NANOFILTRATION MEMBRANE ELEMENT

Performance Characteristics

RS01-35F Nanofiltration Membrane Element adopts special composite membrane, which can permeate monovalent salts and stop bivalent and multivalent salts, also stop the neutral molecules with 50~100 Dalton molecular weight. It is widely used for metal ions' concentration, heavy metal removal, whey protein concentration, peptide concentration and the other small molecular material concentration.

Membrane Specifications

Parameters of Membrane Element


Model	Average Flow Rate gpd(m ³ /d)	Average Salt Rejection %	Test Conditions
RS01-35F	1700 (6.4)	99.0%	1

Notes: Average desalination rate will be measured after 24 hours operation. Flow fluctuation range of single membrane could be ±25%.

Test condition 1: 2000ppm of MgSO₄ solution, 110psi of operating pressure, 25°C of temperature, pH=7, 15% recovery rate.

Schematic Diagram and Dimensions

Figure 1

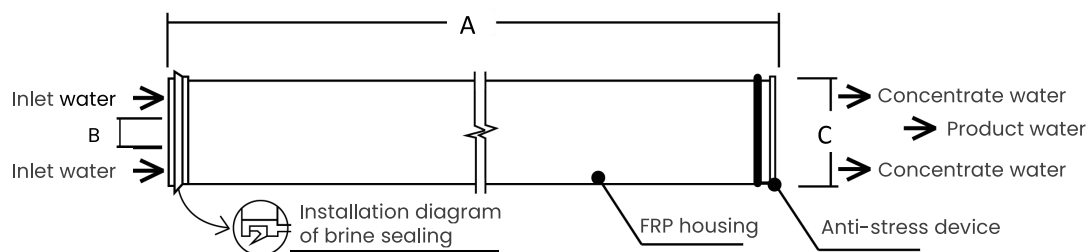

Product model	Connector	Diameter, inch (cm)			Weight (KG)
		A	B	C	
4040	Male connector	40.00 (101.6)	0.75 (1.9)	3.9 (9.9)	6

↘ Operating Conditions

Product Models	RS01-35F
Max Operating Pressure	600psi
Pressure Drop Of Single Membrane	<12psi
Recovery Rate	15%
Max Operating Temperature	50°C
Max Cleaning Temperature	50°C
Continuous Working PH Range	3.0-9.0
Cleaning PH Range	2.0-10.5
Max Allowable Residual Chlorine	500ppm-h
Inlet Water	NTU<1, SDI<5

↘ Storage Conditions

- ☑ Before the first use, all membrane elements must be stored under the original packaging conditions.
- ☑ The transport temperature below 0°C may cause irreversible membrane damage, on the contrary, above 30°C may cause membrane degradation and deterioration of the protection solution.
- ☑ Store in a cool, dry condition and the place where is not directly exposed to sunlight. Storage temperature is kept between 0°C to 30°C, and the longest storage time is 6 months.

↘ General Information

- ☑ Once wetted, the membrane element must always be wet.
- ☑ The limited warranty we promised will expire due to the fact that the user does not strictly follow the operational restrictions and guidelines set forth in this Code.
- ☑ If the system is in a shut down state for a long time, the membrane element is advised to be placed in the protective solution to prevent the growth of microorganisms.
- ☑ If the user uses incompatible chemicals and lubricants to cause improper influence on the membrane elements, the user shall bear the corresponding responsibilities.
- ☑ The maximum allowable pressure drop of single pressure vessel is 60 psi (4.1bar).
- ☑ At no time can the back pressure be produced on the side of producing water to avoid the occurrence of bad problems.